

REMOVAL AND INSTALLATION

Spark Plugs

Removal and Installation

1. Remove the ignition coils. For additional information, refer to Ignition Coil-On-Plug in this section.
2. **NOTICE: Only use hand tools when removing or installing the spark plugs, or damage can occur to the cylinder head or spark plug.**
NOTE: Use compressed air to remove any foreign material in the spark plug well prior to removing the spark plugs.
Remove the spark plugs.
 - To install, tighten to 12 Nm (106 lb-in).

3. Inspect the spark plugs. For additional information, refer to Section 303-00.
4. To install, reverse the removal procedure.
 - Adjust the spark plug gap as necessary.

